

IMPORTANT

Heavenly Heater **must be reset every 20 minutes**. For your safety, the gas valve automatically shuts off after 20 minutes and water flow continues unheated. You **must** turn off water flow and turn it back on to reset the heating process.

Also, for your safety, your heater **automatically shuts off** if the heater tips on its side.

If your heater is exposed to freezing temperatures, you must **drain it completely after use**. The drain port is under the heater.

OPERATION

PRE-CHECK

1. Check that gas supply meets heater specification
2. Before operation, ensure that gas is not leaking from the gas connections

OPERATING HEAVENLY HEATER

1. Connect water supply and water outlet hoses to heater.
2. Connect the gas line with regulator from your propane tank to the heater. Turn gas valve on.
2. Turn water supply on. This will ignite the burner. If the burner does not ignite, check the batteries.
3. Adjust the burner gas flow and water flow knobs to achieve the desired water outflow temperature that is comfortable to the human body.
4. To shut heater down, turn water supply off and gas valve off.
5. Drain the heater if subject to freezing temperatures.

GAS CONTROL KNOB OPERATION

Turn gas control knob clockwise to increase heat and counterclockwise to decrease heat.

WATER FLOW CONTROL KNOB OPERATION

Turn water control knob clockwise to reduce water flow and counterclockwise to increase water flow.

Heavenly Heater	Gas Water Heater
Model	HH-70
Gas Type	11.24" WC
Rated Gas Pressure	20 KW
Applicable Water Pressure	20-80 PSI
Capacity	2.65 GPM
Rated Voltage	DC 3V
Approved by ISO9001	

WARNING

Heavenly Heater is designed for outdoor operation only. Do not use indoors. Exhaust gases can be deadly.

PARTS LIST AND ASSEMBLY

Parts List

- 1 Heater and Frame
- 2 Wheels
- 2 Cotter Pins
- 1 Tank Tray
- 2 Bolts, Nuts, Washers

Assembly

1. Attach wheels to Frame
2. Insert cotter pins to secure wheels
3. Insert Tank Tray into Frame and fasten with Bolts.